

## AR62.30-P-1570T


MODEL 211.0/2

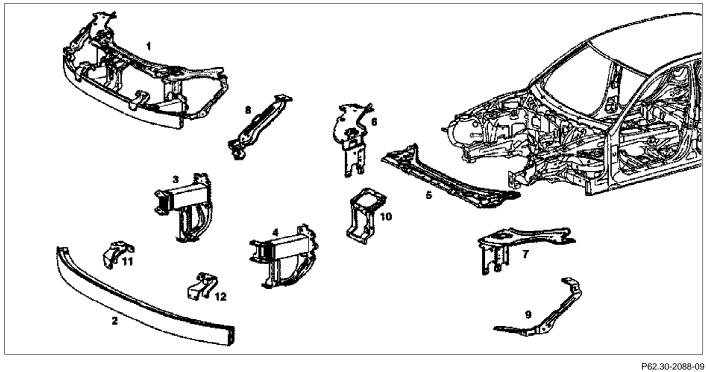

- 1 Complete front end assembly
- 2 Front crossmember
- 3 Right crash box absorber
- 4 Left crash box absorber
- 5 Front center reinforcement
- 6 Right reinforcement
- 7 Left reinforcement
- 8 Right frame


- 9 Left frame
- 10 Catch hook reinforcement
- 11 Combination bracket for right console
- 12 Combination bracket for left console

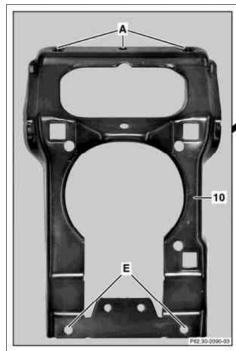

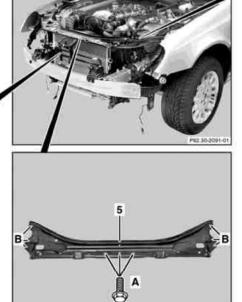


PH2.30




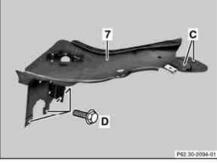

P62.30-2089-09

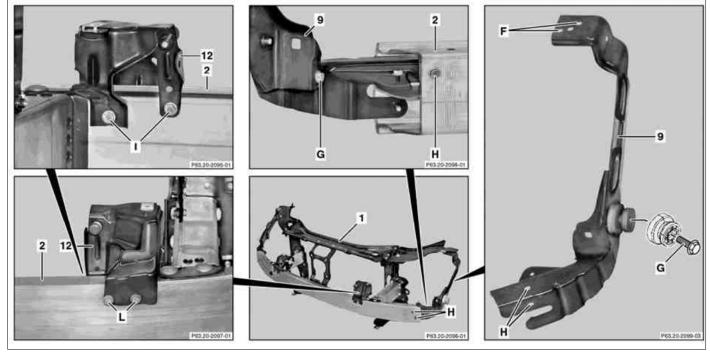

P62.30-2100-09

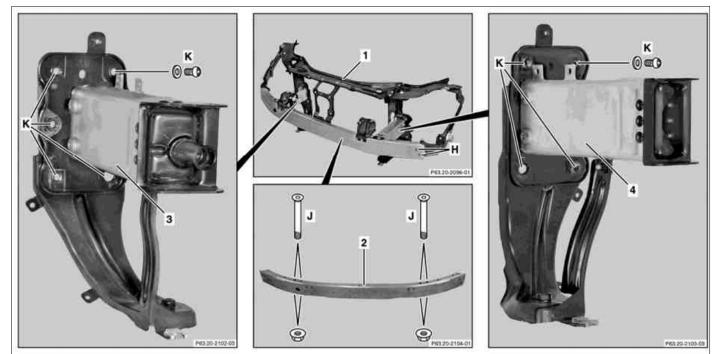

P62.30-2101-09

## Modification notes

30.6.04	Value modified from 70 Nm to 55 Nm	Value modified in BA62.30-P-1001-02A for	*BA62.30-P-1001-02A
		model 211	

X	Remove		
1	Remove lamp unit		AR82.10-P-4730T
2	Remove detachable parts in area to be repaired		
3	Unscrew screws (A and B) and remove reinforcement at front center (5)		
4	Unscrew screws (C)		
5	Fasten radiator with fastening belt		
6	Unscrew screws (K)		
7	Remove front end (1)		
X	Install		
8	Install right (3) and left (4) crash box absorber to longitudinal member(screws K)	Position screws loosely.	

9	Center right (8) and left (9) frame on		
10	crossmember (2) and screw on (screws H) Screw crossmember (2) to right (3) and left (4) crash box absorber (screws J)		
11	Center right (3) and left (4) crash box absorber on longitudinal member and tighten bolts (K).		
12	Install right (6) and left (7) reinforcement, center and screw on (screws D and C)		
13	Screw right (6) and left (7) reinforcement to fender bracket (screws C)		
14	Install center reinforcement (5), center and screw on (screws B)		
15	Install catch hook reinforcement (10), center and screw on (screws A and E)		
16	Install right combination bracket console (11) and left combination bracket console (12), center and screw on (bolts L and I).		
17	Adjust front module	I Fit headlamp unit and bumper for adjustment work. Mm Screw, front end to longitudinal member Mm Screw, outer reinforcement to fender bracket Mm Screw, outer reinforcement to side frame Mm Screw, center reinforcement to outer reinforcement Mm Screw, center reinforcement to catch hook reinforcement Mm Screw, catch hook reinforcement to crossmember Mm Screw, crossmember to crash box Mm Screw, crossmember to combination bracket console Mm Bolt, side frame to crossmember Mm Screw, outer reinforcement to crossmember Mm Screw, crossmember to crossmember Mm Screw, crossmember to crossmember Mm Screw, outer reinforcement to crash box	AR62.30-P-1570-01T *BA62.30-P-1001-02A *BA62.30-P-1006-02A *BA62.30-P-1007-02A *BA62.30-P-1008-02A *BA62.30-P-1009-02A *BA62.30-P-1010-02A *BA62.30-P-1011-02A *BA62.30-P-1013-02A *BA62.30-P-1013-02A *BA62.30-P-1014-02A
18	Adjust gap dimensions on hoods, doors and lids	Gap dimensions S Feeler gauge	*BE60.00-P-1001-01F *129589032100
19	Install detachable body components in area to be repaired		
20	Install lamp unit		AR82.10-P-4730T

## Test values for gap dimensions on hoods, doors and lids

Number	Designation			Model 211.0	Model 211.2	
BE60.00-P-1001-01F	Gap dimension	Engine hood to fender	Dimension "A"	mm	3.5 (F0.5)	3.5 (F0.5)
		Engine hood to headlamp	Dimension"B"	mm	4 (+1)	4 (+1)
		Radiator grille to bumper	Dimension "C"	mm	5.5 (+1)	5.5 (+1)
			See figure in		AR60.00-P-0700-01T	AR60.00-P-0700- 01TA

## Mm Front end assembly with front reinforcement

Number	Designation	Model 211
BA62.30-P-1001-02A	Bolt, front end to longitudinal member Nm	55
BA62.30-P-1006-02A	Bolt, outer reinforcement to fender bracket Nm	10
BA62.30-P-1007-02A	Bolt, outer reinforcement to side of frame Nm	10
BA62.30-P-1008-02A	Bolt, center reinforcement to outer Nm reinforcement	10

BA62.30-P-1009-02A	Bolt, center reinforcement to arrester hook Nm reinforcement	10
BA62.30-P-1010-02A	Bolt, arrester hook reinforcement to Nm crossmember	10
BA62.30-P-1011-02A	Bolt, crossmember to crash box Nm	18
BA62.30-P-1012-02A	Bolt, crossmember to combination bracket Nm console	10
BA62.30-P-1013-02A	Bolt, side of frame to crossmember Nm	10
BA62.30-P-1014-02A	Bolt, outer reinforcement to crash box Nm	10

