
## AR88.80-P-2220TA

Remove/install bumper protective strip

19.4.06


## MODEL 211.0 up to 31.5.06 Rear bumper

- Left outer protective strip Right outer protective strip Center protective strip 1
- 2
- 3
- 4
- Rear bumper Electrical connectors (with code (220) Parktronic system (PTS)) Catch hook 5
- 6

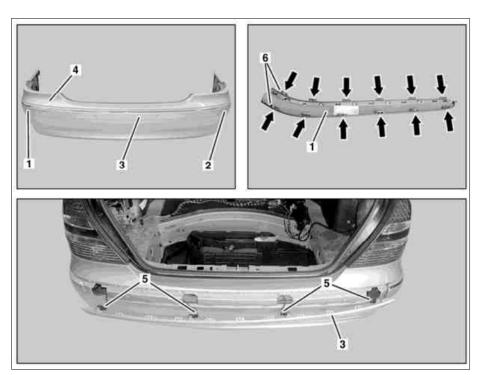

P88.80-2036-06

XX	Remove/install		
1	Mask rear bumper (4) in area of protective strips (1, 2, 3) with adhesive tape	<b>i</b> To avoid paint damage.	
2	Unclip left outer protective strip (1) or right outer protective strip (2) on catch hooks (6, arrows) from rear bumper (4) with long wedge.	i Start from bumper center to outside.	*115589035900
3	Unclip center protective strip (3) from rear bumper (4) with long wedge	i If only center protective strip (3) is to be removed, it is necessary to remove the left outer protective strip (1) or the right outer protective strip (2). Unclip inner catch hooks (6) from remaining left outer protective strip (1) or right outer protective strip (2) from rear bumper (4) and lift left outer protective strip (1) or right outer protective strip (2) until center protective strip (3) can be removed.	*115589035900
4.1	Disconnect electrical connectors (5) from Parktronic system sensors (PTS) and remove center protective strip (3)	On vehicles with code (220) Parktronic system (PTS) i When replacing center protective strip (3) do not disconnect electrical connectors (5).	
5.1	Remove Parktronic system sensors (PTS)	On vehicles with code (220) Parktronic system (PTS) i When replacing center protective strip (3), unclip Parktronic system sensors (PTS) from center protective strip (3) with bracket	AR54.65-P-0002T
6	Install in the reverse order		

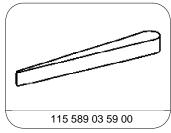

Long wedge