
T1/4

Y32

Ignition coil cylinder 4

Air pump switchover valve

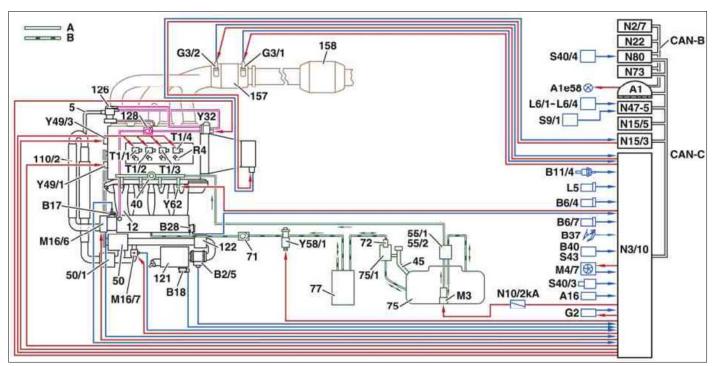

P07.61-2894-79

(Controller-Area-Network)

5	Air line	A1	Instrument cluster	M4/7	Electric suction fan engine and AC
12	Intake manifold	A1e58	Engine diagnosis indicator lamp		with integrated control
40	Fuel pressure damper	A16	Knock sensor	M16/6	Throttle valve actuator
45	Fuel filler neck	B2/5	Hot film mass air flow sensor	M16/7	Recirculated air flap actuator
50	Kompressor	B6/4	Left intake camshaft Hall sensor	N2/7	Restraint systems control unit
50/1	Pressure damper (charge air)	B6/7	Right exhaust camshaft Hall sensor	N3/10	ME-SFI control unit
55/1	Fuel filter with integrated diaphragm	B11/4	Coolant temperature sensor	N10/2kA	Fuel pump relay module
	pressure regulator	B17	Intake air temperature sensor	N15/3	ETC control unit (with AT)
74	(* on models 171, 211 in fuel tank)	B18	Altitude sensor	N15/5	Electronic selector lever module
71	Check valve (activated charcoal	B28	Pressure sensor (intake manifold)	A /OO	control unit (with AT)
72	canister)	B37	Accelerator pedal sensor	N22	AAC pushbutton control unit
72 75	Float valve (* except model 171) Fuel tank	B40	Oil sensor (oil level, temperature	N47-5	(automatic air conditioning)
75 75/1	Expansion reservoir		and quality)	N47-3 N73	ESP, SPS and BAS control unit DI control unit
73/1	(* except model 171)	G2	Alternator	N80	Steering column module
77	Activated charcoal canister	G3/1	O2 sensor downstream of TWC	N60 R4	Spark plugs
110/2	Charge air cooler	G3/2	O2 sensor upstream of TWC	S9/1	Stop lamp switch
121	Air filter	L5	Crankshaft position sensor	39/1	(* except model 171)
122	Suction damper (intake air)	L6/1	Left front rpm sensor	S40/3	Clutch pedal switch
126	Secondary air injection/ exhaust gas	L6/2	Right front rpm sensor	0.70/0	(with manual transmission)
120	recirculation combination valve	L6/3	Left rear rpm sensor	S40/4	Cruise control pushbutton switch
128	Check valve vacuum	L6/4	Right rear rpm sensor		(with variable speed limit)
157	Exhaust manifold with firewall	МЗ	Fuel pump (for model 171 fuel		, ,
	catalytic converter		pump assembly)		
158	Underfloor catalytic converter				
T1/1	Ignition coil cylinder 1	Y49/1	Intake camshaft solenoid	CAN B	databus body
T1/2	Ignition coil cylinder 2	Y49/3	Exhaust camshaft solenoid	0444.6	(Controller-Area-Network)
T1/3	Ignition coil cylinder 3	Y58/1	Purge control valve	CAN C	databus engine

Fuel injection valves

Fuel pipe

Purge line

Y62

Α

В