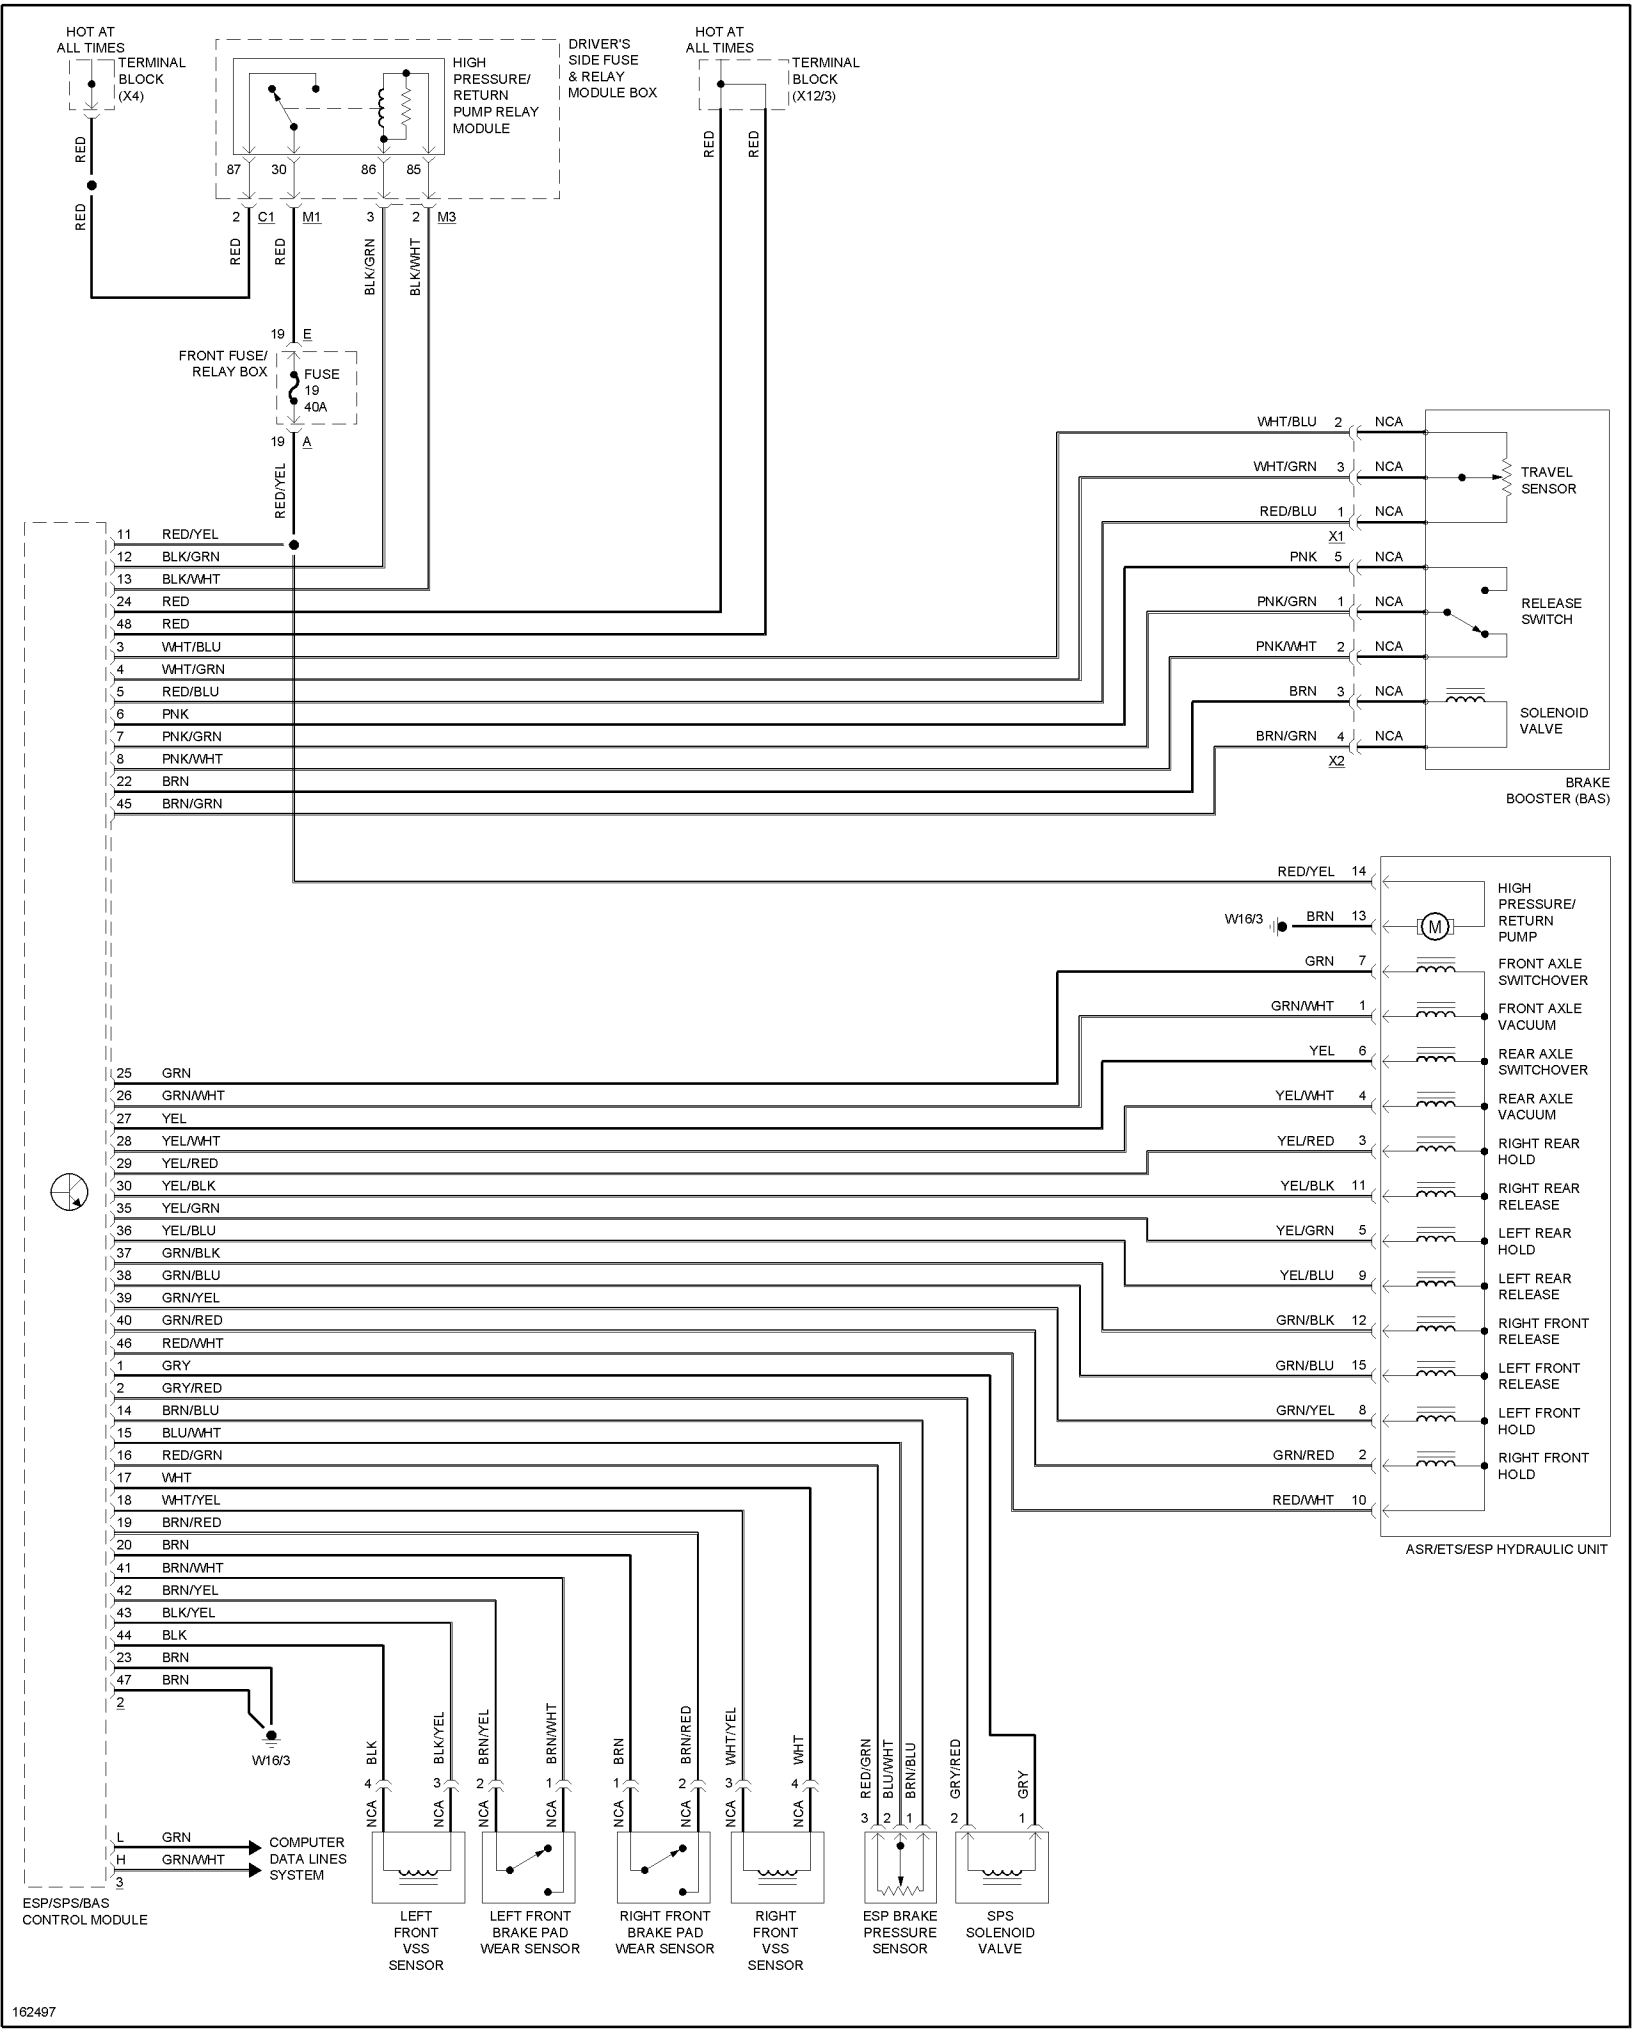
HOT AT ALL TIMES
TERMINAL BLOCK (X4)
RED
RED
HIGH PRESSURE/ RETURN PUMP RELAY MODULE
DRIVER'S SIDE FUSE & RELAY MODULE BOX
87
30
86
85
2
C1
M1
3
2
M3
RED
RED
BLK/GRN
BLK/WHT
HOT AT ALL TIMES
TERMINAL BLOCK (X12/3)
RED
RED
19
E
FRONT FUSE/ RELAY BOX
FUSE 19 40A
19
A
RED/YEL
11 RED/YEL
12 BLK/GRN
13 BLK/WHT
24 RED
48 RED
3 WHT/BLU
4 WHT/GRN
5 RED/BLU
6 PNK
7 PNK/GRN
8 PNK/WHT
22 BRN
45 BRN/GRN
WHT/BLU 2 NCA
WHT/GRN 3 NCA
RED/BLU 1 NCA
X1
PNK 5 NCA
PNK/GRN 1 NCA
PNK/WHT 2 NCA
BRN 3 NCA
BRN/GRN 4 NCA
X2
TRAVEL SENSOR
RELEASE SWITCH
SOLENOID VALVE
BRAKE BOOSTER (BAS)
RED/YEL 14
W16/3
BRN 13
HIGH PRESSURE/ RETURN PUMP
GRN 7
FRONT AXLE SWITCHOVER
GRN/WHT 1
FRONT AXLE VACUUM
YEL 6
REAR AXLE SWITCHOVER
YEL/WHT 4
REAR AXLE VACUUM
YEL/RED 3
RIGHT REAR HOLD
YEL/BLK 11
RIGHT REAR RELEASE
YEL/GRN 5
LEFT REAR HOLD
YEL/BLU 9
LEFT REAR RELEASE
GRN/BLK 12
RIGHT FRONT RELEASE
GRN/BLU 15
LEFT FRONT RELEASE
GRN/YEL 8
LEFT FRONT HOLD
GRN/RED 2
RIGHT FRONT HOLD
RED/WHT 10
ASR/ETS/ESP HYDRAULIC UNIT
25 GRN
26 GRN/WHT
27 YEL
28 YEL/WHT
29 YEL/RED
30 YEL/BLK
35 YEL/GRN
36 YEL/BLU
37 GRN/BLK
38 GRN/BLU
39 GRN/YEL
40 GRN/RED
46 RED/WHT
1 GRY
2 GRY/RED
14 BRN/BLU
15 BLU/WHT
16 RED/GRN
17 WHT
18 WHT/YEL
19 BRN/RED
20 BRN
41 BRN/WHT
42 BRN/YEL
43 BLK/YEL
44 BLK
23 BRN
47 BRN
2
W16/3
L GRN
H GRN/WHT
3
COMPUTER DATA LINES SYSTEM
ESP/SPS/BAS CONTROL MODULE
BLK
BLK/YEL
BRN/YEL
BRN/WHT
BRN
BRN/RED
WHT/YEL
WHT
RED/GRN
BLU/WHT
BRN/BLU
GRY/RED
GRY
NCA
LEFT FRONT VSS SENSOR
LEFT FRONT BRAKE PAD WEAR SENSOR
RIGHT FRONT BRAKE PAD WEAR SENSOR
RIGHT FRONT VSS SENSOR
ESP BRAKE PRESSURE SENSOR
SPS SOLENOID VALVE

162497